



EXMAC

Operating Instructions and Parts Manual Woodturning Lathe

Model : AL-EL20-U



EXMAC

www.exmactools.com

VER.1



IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce risk of injury:

1. Read and understand the entire owner's manual before attempting assembly or operation.
2. Read and understand the warnings posted on the machine and in this manual. Failure to comply with all of these warnings may cause serious injury.
3. Replace warning labels if they become obscured or removed.
4. This wood lathe is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper and safe operation of a wood lathe, do not use it until the proper training and knowledge have been obtained.
5. Do not use this lathe for other than its intended use. If used for other purposes, EXMAC disclaims any real or implied warranty and holds itself harmless from any injury that may result from that use.
6. Always wear ANSI Z87.1 approved safety glasses or face shield while using this wood lathe. (Everyday eyeglasses only have impact resistant lenses; they are *not* safety glasses.)
7. Make certain the machine is properly grounded.
8. Before operating the machine, remove tie, rings, watches, other jewelry, and roll sleeves up past the elbows. Remove all loose clothing and confine long hair. Do **not** wear gloves.
9. Keep the floor around the machine clean and free of scrap material, oil and grease.
10. Keep machine guards in place at all times when the machine is in use. If removed for maintenance purposes, use extreme caution and replace the guards immediately.
11. Do **not** over reach. Maintain a balanced stance at all times, so that you do not fall or lean against rotating parts.
12. Make all machine adjustments or maintenance with the machine unplugged from the power source.
13. Use the right tool. Do not force a tool or attachment to do a job that it was not designed to do.
14. Make certain the switch is in the **OFF** position before connecting the machine to the power supply.
15. Give your work undivided attention. Looking around, carrying on a conversation and "horse-play" are careless acts that can result in serious injury.
16. Keep visitors a safe distance from the work area. Keep children away.
17. Make your workshop child proof with padlocks, master switches or by removing starter keys.
18. Maintain a balanced stance at all times so that you do not fall onto moving parts. Do not overreach or use excessive force to perform any machine operation.
19. Use recommended accessories; improper accessories may be hazardous.
20. Do not operate this lathe while under the influence of drugs, alcohol or any medication.
21. Keep tools sharp and clean for safe and best performance. Dull tools can grab in the workpiece and be jerked from the operator's hands, causing serious injury.
22. Check the condition of the stock to be turned. Make sure it is free of knots, warpage, checked ends, improperly made or cured glue joints and other conditions which can cause it to be thrown out of the lathe.
23. Securely fasten spur and live centers to the material being used.
24. Check centers and tapers in the headstock and tailstock to be sure they are free of dirt or rust, and oil lightly before inserting centers.
25. Test each set-up by revolving the workpiece by hand to ensure it clears the tool rest and bed. Check the setup at the lowest speed before increasing to operating speed.
26. Use the correct cutting tool for the operation to be performed and keep all tools sharp.
27. Use low speeds for roughing and for long or large diameter work. If vibration occurs, stop the machine and correct the cause.
28. When sanding, remove the tool rest from the machine, apply light pressure and use a slow speed to avoid heat buildup.
29. When turning large diameter pieces, such as bowls, always operate the lathe at low speeds. See speed.
30. Do not attempt to engage the spindle lock pin until the spindle has stopped. If leaving the machine area, turn lathe off and wait until the spindle stops rotating before departing.
31. Make no adjustments except speed changes with the spindle rotating, and always disconnect the machine from the power source when performing maintenance to avoid accidental starting or electrical shock.

32. Provide for adequate space surrounding work area and non-glare, overhead lighting.
33. When stopping the lathe, never grab the workpiece or faceplate to slow it down. Let the work coast to a stop.
34. Use only EXMAC authorized replacement parts and accessories; otherwise, the warranty and guarantee are null and void.
35. Use proper extension cord. Make sure your extension cord is in good condition. When using

an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Familiarize yourself with the following safety notices used in this manual:

⚠CAUTION

This means that if precautions are not heeded, it may result in minor injury and/or possible machine damage.

⚠WARNING

This means that if precautions are not heeded, it may result in serious, or possibly even fatal, injury.

SAVE THESE INSTRUCTIONS

About this manual

This manual is provided by EXMAC, covering the safe operation and maintenance procedures for a Model AL-EL20-U Woodturning Lathe. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. Your machine has been designed and constructed to provide consistent, long-term operation if used in accordance with the instructions as set forth in this document.

This manual is not intended to be an exhaustive guide to lathe operational methods, use of after-market accessories, choice of stock, and such. Additional knowledge may be obtained from experienced users or trade articles. Whatever accepted methods are used, always make personal safety a priority.

If there are questions or comments, please contact your local supplier or EXMAC. EXMAC can also be reached at our web site: www.exmactools.com

Retain this manual for future reference. If the machine transfers ownership, the manual should accompany it.

⚠WARNING

Read and understand the entire contents of this manual before attempting assembly or operation! Failure to comply may cause serious injury!

Specifications

Model number..... AL-EL20-U
Stock number

Motor and electricals:

Motor typetotally enclosed fan cooled, induction
Horsepower..... 3HP (2.2 kW)
Phase..... 3
Voltage..... 230 V
Cycle..... 60Hz
Listed FLA (full load amps) 10 A
Starting amps 6A
Running amps (no load)..... 3 A
Power transfer V-belt

Drive.....	electronic variable speed, inverter control
On/off switch	PUSH BUTTON
Motor speed	1720 RPM
Power cord	SJT 3x14AWG (300V)
Power cord length.....	6 ft. (183cm)
Power plug installed.....	N/A
Power input requirements	single phase,230V only
Recommended circuit size ¹	15A
Noise emission without load ²	78 dB at 20 inches from motor

Capacities:

Working distance between centers.....	29.8 in. (758 mm) with single bearing center
Working distance between centers.....	26.8 in. (680 mm) with live cone center
Working distance between centers, optional 20" bed ext. mounted	49.8 in. (1265 mm) single bearing center
Working distance between centers, optional 20" bed ext. mounted	46.8 in. (1188 mm) with live cone center
Maximum distance between spindle face and tailstock quill, optional 20" bed ext. mounted	48 in. (1219 mm)
Swing over bed.....	20in. (508 mm)
Swing over tool rest base.....	16 in. (406 mm)
Indexing.....	24 positions, positive locking, 15 degree increments
Swing over 20" bed extension in low position (<i>optional accessory</i>)	38 in. (965 mm)

Headstock and Spindle:

Spindle taper	MT-2
Spindle thread, inboard.....	1-1/4 in. x 8 TPI
Spindle, outboard	1.18" (30mm)
Spindle speed (RPM).....	variable within 15-1200 (low),50~2200(medium) and 60-3750 (high)
Headstock spindle bore	3/8 in. (10 mm)
Spindle direction.....	forward and reverse
Headstock movement	rotating & sliding

Tailstock:

Tailstock quill taper	MT-2
Tailstock bore	3/8 in. (10mm)
Tailstock quill travel	5.3 in. (135 mm)
Tailstock quill thread	TR20x4 (LH)

Materials:

Legs	cast iron
Bed	cast iron
Headstock	cast iron
Headstock spindle	steel
Tailstock	cast iron
Tailstock quill.....	hardened HRC30 steel, with laser etched scale
Tool support and base	steel & cast iron

¹ subject to local/national electrical codes

² The specified values are emission levels and are not necessarily to be seen as safe operating levels. As workplace conditions vary, this information is intended to allow the user to make a better estimation of the hazards and risks involved only.

Weights:

Net weight (approx.)	616 lbs
Shipping weight (approx.)	650 lbs

Dimensions:

Tool rest	14 in. (356 mm)
Leg footprint	55X32.9 in. (1400 x838 mm)
Bed length	55 in. (1400 mm)
Bed width	8 in. (205 mm)
Bed gap.....	2-1/2 in. (63.5 mm)
Overall height, floor to top of headstock, without levelers.....	47 in. (1104mm)
Distance floor to spindle centerline (approximate)	43.5 in. (1094 mm)
Tool rest post diameter	1 in & 1.18in. (25&30 mm)
Shipping dimensions (LxWxH).....	59.8x 27.1 x 29.1 in. (1520 x 690 x 740 mm)
Overall dimensions, assembled (LxWxH).....	68.9X22.7X49.8 in. (1750 x 577 x 1266 mm)
Bed Extension length (<i>optional accessory</i>)	20 in. (508 mm)

L= length; W=width; H=height

The specifications in this manual were current at time of publication, but because of our policy of continuous improvement, EXMAC reserves the right to change specifications at any time and without prior notice, without incurring obligations.

Setup and assembly

⚠WARNING The Lathe must be disconnected from power during assembly.

Description

Carton contents (see Figure 5-1)

- A. Motor
- B. Hand wheel
- C. Headstock
- D. Faceplate
- E. Camlock
- F. Toolrest
- G. Live center
- H. Quill
- I. Tailstock
- J. Tailstock hand wheel
- K. Bed
- L. Leg
- M. Inverter box
- N. Control box

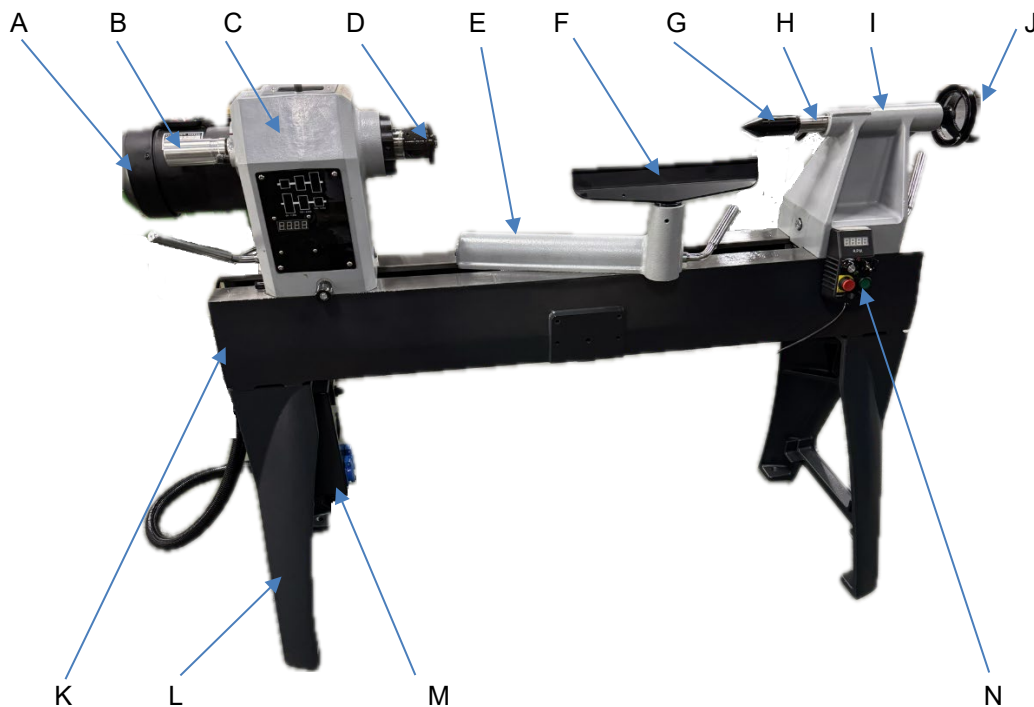


Figure 5-1: DESCRIPTION

Tools required for assembly

Hex keys, 3mm, 4mm, 6mm
Open end wrench, 17mm

Unpacking and cleanup

1. Remove all smaller items from main carton. Do not discard carton or packing material until lathe is assembled and running satisfactorily.
2. Inspect contents for shipping damage; if any is found, report it to your distributor.
3. Compare contents of shipping carton with the contents list in this manual. Report shortages, if any, to your distributor. **Note:** Check lathe first – some parts may have been pre-installed.
4. Exposed metal areas of the Lathe, such as bed ways and spindles, have been factory coated with a protectant. This should be removed with a soft cloth and a cleaner-degreaser. Clean the bed areas under headstock, tailstock and tool support base. Do not use an abrasive pad, and do not allow solvents to contact painted or plastic areas.

Installing leg

See Figures 5-3.

⚠WARNING Lathe is heavy – use caution during leg installment procedures. Use straps in good condition. Straps/lifting mechanisms must be properly rated for lathe weight.

Hoist lifting method

1. Position straps around lathe bed. **IMPORTANT:** Do *not* place straps around spindle, near levers, knobs or other parts that can be damaged when lifting.
2. Position lathe onto legs and secure with screws and washers using 17mm wrench.
3. Tighten screws firmly.



Figure 5-3: installing legs

Manual lifting method

⚠CAUTION Use help from an assistant for the following procedures.

1. Unscrew stud from each end of bed. (Note: studs can be stored in one of the threaded holes in lathe legs.)
2. Remove headstock, tailstock and tool rest support from bed.
3. Carefully turn bed upside down. Place a mat or cardboard beneath it to prevent scratching the bed ways.
4. Install legs with screws and washers using 17mm wrench. Tighten screws firmly.
5. Raise bed and leg assembly right-side up.
6. Rotate levelers as needed to establish level for the lathe. Tighten hex nut on each leveler against leg casting.
7. Install headstock, tool support and tailstock, and both studs

Electrical connections

⚠WARNING Electrical connections must be made by a qualified electrician in compliance with all relevant codes. This machine must be properly grounded to help prevent electrical shock and possible fatal injury.

The AL-EL20-U lathe requires 230-volt single-phase input. It is equipped with a power inverter, located between the power cord and the drive motor. The inverter takes the 230V 1-phase input from the power cord and converts it to the 230V 3-phase output required by the drive motor.

The lathe comes without a plug

Before connecting to power source, be sure switch is in *off* position.

It is recommended that the lathe be connected to a dedicated 15 amp circuit with a circuit breaker or fuse. If connected to a circuit protected by fuses, use time delay fuse marked "D". **Local codes take precedence over recommendations.**

GROUNDING INSTRUCTIONS

This tool must be grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠WARNING Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the tool – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Use only 3-wire extension cords that have 3-prong grounding plugs and 3-pole receptacles that accept the tool's plug.

Repair or replace damaged or worn cord immediately.

operation

IMPORTANT: The AL-EL20-U Lathe cannot be run on a GFCI circuit.

⚠CAUTION A lightning strike or power surge may cause inverter failure. When lathe is not in use, disconnect power plug, or have a 3- or 4-pole disconnect installed on the power side.

For most turning operations, except outboard turning, the headstock is positioned at the left end of bed, and the tailstock moved to accommodate the workpiece.

Cam tightness

The clamping mechanisms of headstock, tailstock and tool rest base are pre-set by the manufacturer, and should not require adjustment.

If one of them does not tighten properly against the bed when the locking handle is tightened, adjust it as follows. (Figure 7-4 uses tailstock as example.)



Figure 7-4: cam adjustment

1. Remove stud from end of lathe bed, and slide tailstock off.
2. Turn tailstock on its side, and tighten lock nut (Figure 7-4) to increase cam pressure, or loosen the nut to relieve cam pressure.
3. Mount tailstock on bed and lock it to verify adjustment. Repeat as needed.
4. Reinstall stud.

Tool rest

See Figure 7-5.

A 14-inch tool rest is provided with your lathe. It is designed to allow adjustment for height, position on the bed, and angle to the work.

Loosen locking handle on tool rest base (Figure 7-5) to slide base forward or back, and to angle it to the bed. Tighten locking handle firmly before operating lathe.

Loosen handle to raise or lower tool rest and angle it to the work. Tighten handle before operating lathe.



Figure 7-5: tool rest

Locking handles

Locking handles, such as Figure 7-5, are adjustable. Simply lift out on handle, rotate it on the pin, then release it, making sure it seats itself on the pin.

Spindle indexing

See Figure 7-7.

Indexing is used to create evenly spaced features in a workpiece, while keeping the lathe spindle locked; for example, when cutting flutes on a spindle blank with a hand-held router, while the spindle blank is secured between lathe centers.

The AL-EL16-U lathe provides 36 indexing positions at 10-degree increments.

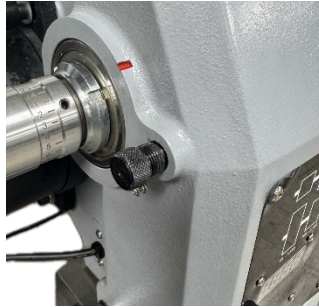


Figure 7-7: index pin

1. Rotate spindle using handwheel until index pin (Figure 7-7) aligns with desired hole.
2. Screw index pin into hole until it engages spindle.
3. Perform desired procedure.
4. Unscrew index pin until spindle is released. Rotate spindle to next desired hole, and repeat.

CAUTION Disengage index pin before starting lathe.

IMPORTANT: Do not use index pin to lock spindle, which will cause unnecessary wear to the pin. Use spindle lock for this purpose.

Spur center: Installing/removing

The spur center is installed into the headstock spindle. The center should first be mounted to your workpiece, and then installed into the spindle.

1. Disconnect lathe from power source.
2. Clean tapered end of center, and inside of headstock spindle, then push center into headstock spindle.
3. To *remove* a center, first remove workpiece from lathe. Insert knockout rod (Figure 7-8) through hole in handwheel and tap the end of spur center.

IMPORTANT: Hold the center by either placing your thumb and forefinger on outside diameter of spur center, or wrapping the center with a rag. The center can be damaged if allowed to fall.



Figure 7-8: removing spur center

Live center: Installing/removing

Live centers are installed into the tailstock quill. See Figure 7-9.

1. Disconnect lathe from power source.
2. Clean tapered end of center and inside of tailstock quill, then push center into quill. Test the insertion by attempting to pull the center out of the quill by hand. It should remain secure within the quill.
3. Always tighten quill locking handle, once the live center has been properly positioned in workpiece. Make sure keyway in quill is aligned with locking handle.

To remove a live center:

4. Back off tailstock and remove workpiece from lathe.
5. Loosen quill lock handle.
6. Rotate handwheel counterclockwise to retract quill all the way, until live center comes out. *Hold the center while doing this to prevent it from falling.*



Figure 7-9: installing live center

Spindle lock

Push spindle lock pin (Figure 7-11) and rotate spindle slightly until pin engages. Slide plate downward to hold pin in locking position.

Release spindle lock by pushing plate upward.

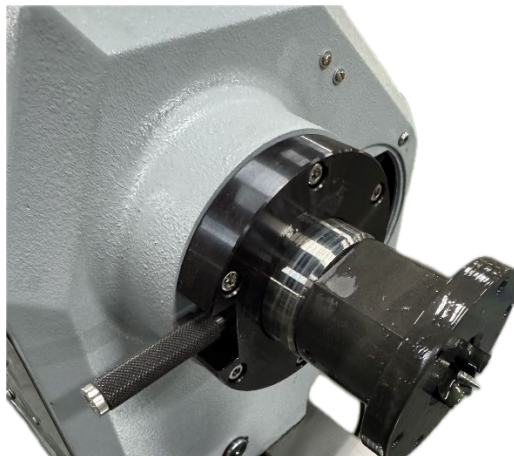


Figure 7-11: spindle lock and face plate

Face plate: Installing/removing

1. Disconnect lathe from power source.
2. Mount face plate to your workpiece.
3. Engage spindle lock.

4. Install face plate onto threads of headstock spindle and rotate clockwise as far as it will go.
5. Tighten both set screws in face plate. Face plate is now ready for turning.



Make certain set screws in face plate are tight before reversing lathe spindle rotation.

6. To *remove* face plate, engage spindle lock. **Loosen both set screws** in face plate, and turn face plate counterclockwise with face plate wrench to loosen.

Checking center alignment

When the headstock is returned from outboard position, the alignment between centers should be checked.

1. Lock headstock in normal spindle turning position.
2. Use double cone connect tailstock and headstock until centers in line (see Figure 7-12). Lock tailstock in position.
3. View the center points from top and side to make sure they align.
4. If centers do not align, unlock headstock and pivot it slightly. There should be enough “play” in headstock to adjust for this alignment. Lock headstock when finished.



Figure 7-12: double cone alignment

Speed Change

See Figure 7-13.

1. Disconnect lathe from power source.
2. To change speed range, open access door on headstock.
3. Loosen pivot lock handle (Figure 7-13) and pull tension handle to lose motor. Tighten pivot lock handle to hold motor in front position.
4. There should be sufficient slack in the belt to reposition it to the other steps on the sheaves. The label on access door shows required belt position.
5. Loosen pivot lock handle and push back motor to tension belt. Be sure that Poly-V grooves of belt seat properly in corresponding groove of sheave. Do not over-tension; a very light pressure on tension handle is adequate to prevent belt slippage.
6. Tighten pivot lock handle and close access door.



Figure 7-13: speed range adjustment

Power Switch

See Figures 8-1,8-2.

Power switch : turn switch on let power in to lathe

Note: If a power outage occurs during operation, the lathe will not immediately restart when power resumes. Cycle the ON switch to restart.



Figure 8-1: switch safety key

Speed control knob : Clockwise to increase, counterclockwise to decrease. Speed is displayed as RPM (revolutions per minute) on digital readout

CAUTION Change speed while lathe spindle is turning to avoid overstressing belt.



Figure 8-2: operating controls

Forward/Reverse

WARNING When turning with a face plate, make sure both set screws on face plate are tight before reversing spindle direction. Failure to comply may cause face plate to spin loose from spindle.

A.C. Inverter (mounted to rear of headstock)

The EL20-U Lathe uses the latest technology in A.C. inverter drives to provide infinitely variable spindle speeds within the specified ranges. The inverter controls the speed of the motor by varying the frequency of the voltage supplied to the motor. The inverter provides an acceleration ramp that eliminates the shock of normal starting. Also, a braking feature eliminates long coasting periods after the Lathe is turned off.

The 3 horsepower motor is designed for use with inverter drives, and is balanced to reduce noise and minimize vibration.

The A.C. Inverter is pre-programmed from the factory. **DO NOT ATTEMPT TO ADJUST INVERTER SETTINGS.** Use only the controls on the CONTROL BOX. If you suspect there is a problem with the inverter or inverter settings, Connect with EXMAC

CAUTION A lightning strike or power surge may cause inverter failure. When lathe is not in use, disconnect power plug, or have a 3- or 4-pole disconnect installed on the power side.

Operation

The information which follows is general in nature and not intended to be a complete course in woodturning. Nothing can replace the knowledge gained by talking with experienced woodturners or consulting books or trade magazines. Above all, simple trial and error will aid in developing proficiency in the craft.

Inspection

Before operating the lathe, check that everything is in proper working order:

1. Level your machine; use the leveling feet to help reduce vibration.
2. Check bearings; adjust only if endplay exists.
3. Check belt; it should be snug but not overly tight.
4. Bed ways; keep clean, use steel wool to remove any rust spots, and apply paste wax to prevent buildup of rust and finishes.
5. Tool rest; use a mill file to remove nicks and dings.

6. Spindle tapers; should be clean and free of dust and chips for proper seating of tapers.
7. Tailstock; clean and lubricate quill and locking device.
8. Lighting; proper lighting is essential to eliminate shadows and reduce eye strain.

Turning Tools

If possible, select only good-quality, high-speed steel turning tools. High-speed steel tools hold an edge and last longer than ordinary carbon steel. As one becomes proficient in turning, a variety of specialty tools for specific applications can be acquired. The following tools provide the basics for most woodturning projects (see Figure 9-1):

Skews – 1-1/2" and 1" or 1-1/4", used to make finishing cuts and details.

Large Roughing Gouge – 1" to 1-1/4", used to eliminate waste wood.

Spindle Gouges – 1/4", 3/8", 1/2", used to turn beads, coves and other details.

Deep Fluted Bowl Gouge – 1/4", 3/8" and 1/2", used for turning bowls & plates.

Square Scraper (Bedan) – 3/8" or 1/2", used to create square shoulders.

Large Round Nose (Domed) Scraper – 1-1/2", used to reduce ridges on interior of bowls, round edges of bowls, etc.

Parting Tool - 1/8", used for scraping, making a cut-off, or to set diameters for sizing.

For safety and best performance, *keep tools sharp*. If a tool stops cutting or requires excessive pressure to make a cut, it needs to be sharpened. A number of brand name sharpening jigs and fixtures are available; however, a woodturner should learn to sharpen tools freehand.

For best results, use a slow speed grinder (1800 rpm) fitted with a 60-grit aluminum oxide wheel (for shaping) and a 100-grit alum. oxide wheel (for final sharpening and touchup). The grinder should be located near your lathe and at a comfortable height. A diamond dresser will keep the wheels true and eliminate glazing.

Never allow the tool to rest in one place on the wheel, keep it moving and use a light touch.

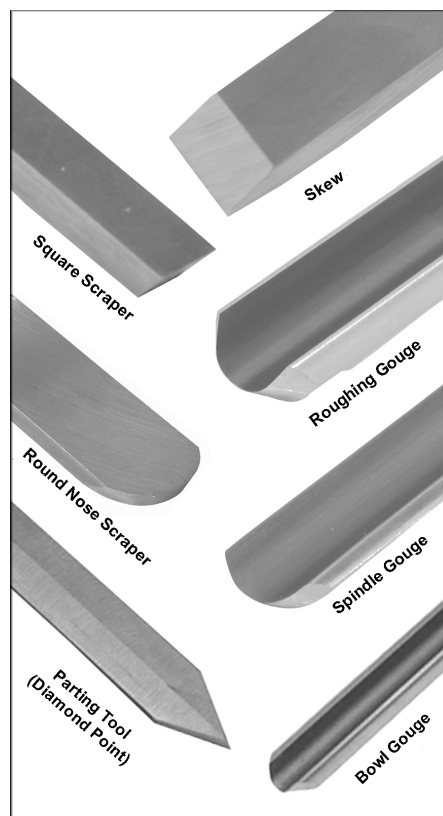


Figure 9-1: basic turning tools

Carbon steel tools can overheat easily and should be cooled frequently. If the edge turns blue, it has lost its temper and should be ground past the blue area. High-speed steel tools are not as likely to overheat, but can be

damaged if allowed to get red hot. High-speed steel tools should not be quenched for cooling. Honing with a diamond lap or slipstone will save trips to the grinder and keep the edge fresh.

Spindle Turning

Spindle turning takes place between the centers of the lathe. It requires a spur or drive center in the headstock and a live or dead center in the tailstock. A cup center rather than a cone center in the tailstock will often reduce the risk of splitting the stock.

Figure 9-2 shows the basic profile shapes in spindle turning.

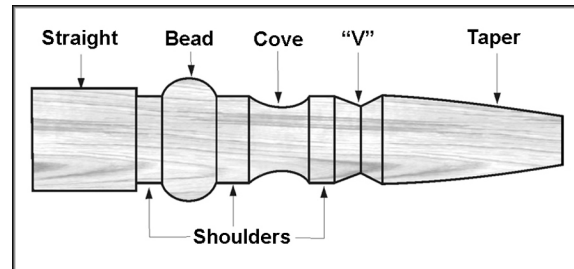


Figure 9-2

Stock Selection

Stock for spindles should be straight grained and free of checks, cracks, knots and other defects. It should be cut 1/8" to 1/4" larger than the finished diameter and may require additional length so the ends can be removed later. Larger stock should have the corners removed to produce an octagon making the piece easier to rough down to a cylinder.

1. With a combination square, or plastic center finder for round stock, locate and mark center on each end of the workpiece. Accuracy is not critical on full rounds but extremely important on stock where square sections are to remain. Put a dimple in the stock with an awl or nail, or use a spring-loaded automatic center punch.
2. Extremely hard woods may require kerfs cut into the ends of the stock (Figure 9-3) using a band saw, so the wood will accept the spur center and the live center.

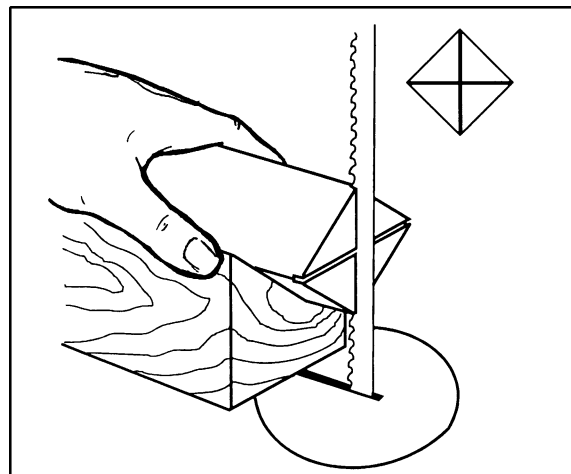


Figure 9-3

3. Drive the spur center about 1/4" into the workpiece, using a wood mallet or dead blow hammer as shown in Figure 9-4. Be careful that you do not split the workpiece.

CAUTION

Never use a steel face hammer and never drive the workpiece onto the spur center while it is mounted in the Lathe spindle.

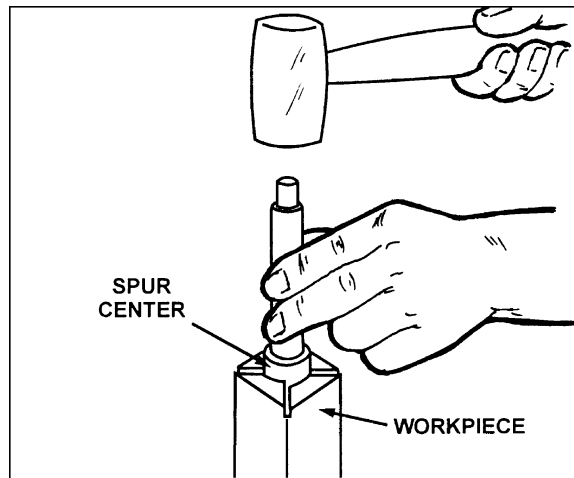


Figure 9-4

4. Make sure headstock is locked to lathe bed.
5. Clean tapered end of spur center and inside of headstock spindle.
6. Insert tapered end of spur center (with the attached workpiece) into headstock spindle.
7. Support the workpiece while bringing the tailstock into position about 1-inch away from end of workpiece. Lock tailstock to bed.
8. Advance tailstock quill with the handwheel in order to seat the live center into the workpiece. Use enough pressure to secure the workpiece between the centers so that it won't fly off, but do not use excessive pressure.
9. Tighten quill locking handle.

CAUTION The tailstock quill is capable of exerting excessive pressure against workpiece and headstock. Apply only sufficient force with tailstock to hold workpiece securely in place. Excessive pressure can overheat center bearings and damage both workpiece and lathe.

10. Move tool rest into position. It should be parallel to workpiece, just below the centerline and approximately 1/8" to 1/4" from the corners of the workpiece to be turned, as in Figure 9-5. Tighten tool rest base to Lathe bed.
11. Rotate workpiece by hand to check for proper clearance.
12. Start lathe at lowest speed and bring it up to the appropriate RPM for the size of workpiece used. Consult digital readout on the headstock.

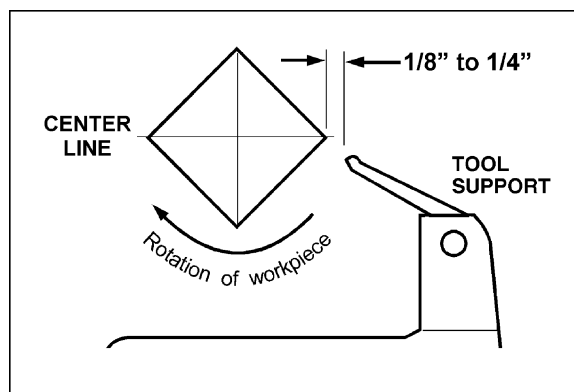


Figure 9-5

Cutting Techniques

Roughing Out

1. Begin with a large roughing gouge. Place the tool on the tool rest with the heel of the tool on the surface to be cut.

2. Slowly and gently raise tool handle until cutting edge comes into contact with the workpiece.
3. Beginning about 2" from the tailstock end of the workpiece, roll the flute (hollowed-out portion) of the tool in the direction of the cut. See Figure 9-6. Make long sweeping cuts in a continuous motion to rough the piece down to a cylinder.
4. Keep as much of the bevel of the tool as possible in contact with the workpiece to ensure control and avoid catches. NOTE: Always cut down-hill, or from large diameter to small diameter. Always work *toward* the end of a work-piece, never start cutting at the end.

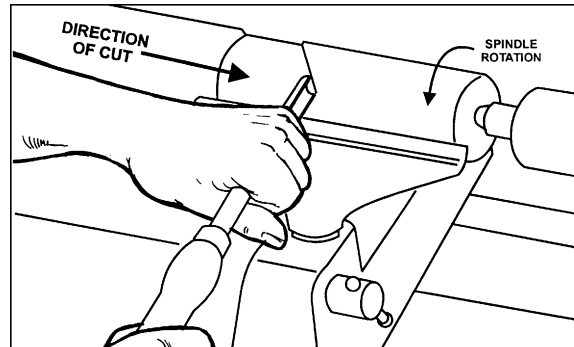


Figure 9-6

5. Once the workpiece is roughed down to a cylinder, smooth it with a large skew. Keep the skew handle perpendicular to the spindle and use only the center third of the cutting edge for a long smoothing cut (touching one of the points of the skew to the spinning workpiece may cause a catch and ruin the workpiece).
6. Add details to the workpiece with skew, parting tool, scraper or spindle gouge.

Beads

1. Make a parting cut for what is to be a bead to the desired depth. Place the parting tool on the tool support and move tool forward to make the full bevel of the tool come into contact with the workpiece. Gently raise handle to make cut to the appropriate depth.
2. Repeat for other side of the bead.
3. Using a small skew or spindle gouge, start in the center between the two cuts and cut down each side to form the bead. Roll the tool in direction of cut.

Coves

1. Use a spindle gouge. With the flute of the tool at 90 degrees to the workpiece, touch the point of the tool to the workpiece and roll in towards the bottom of the cove. See Figure 9-7. **Stop at the bottom; attempting to go up the opposite side may cause the tool to catch.**

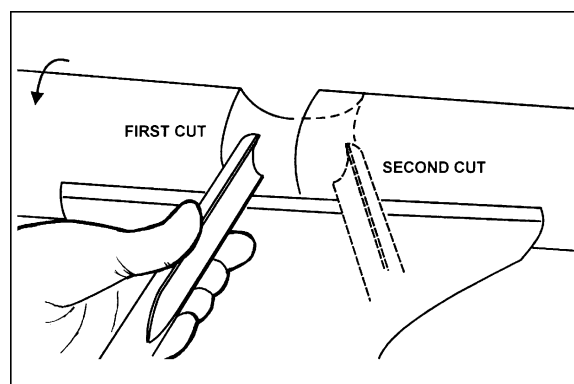


Figure 9-7

2. Move the tool over the desired width of the cove.
3. With the flute facing the opposite direction, repeat step 1 for other side of cove. Stop at bottom of cut.

"V" Cuts

1. Use the long point of the skew. (NOTE: Do not press the long point of the skew directly into the workpiece to create the "V"; this will result in a burned or burnished "V" with fibers being rolled up at both sides.)

2. Lightly mark the center of the "V" with the tip of the skew.
3. Move the point of the skew to the right half of the desired width of your cut.
4. With the bevel parallel to the right side of the cut, raise the handle and push the tool in to the desired depth, as shown in Figure 9-8.

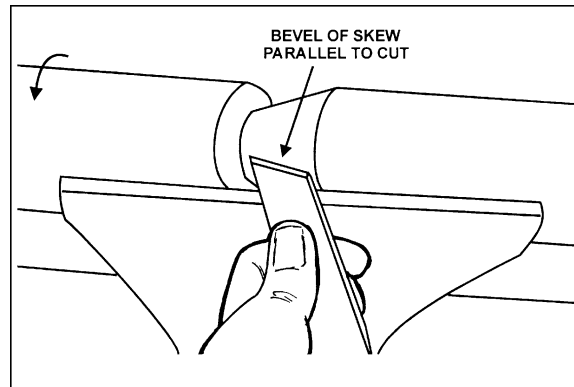


Figure 9-8

5. Repeat from the left side. The two cuts should meet at the bottom and leave a clean "V" cut.
6. Additional cuts may be taken to add to either the depth or width of the cut.

Parting Off

1. Use parting tool.
2. Adjust lathe speed to lower RPM for parting through a workpiece.
3. Place tool on tool support and raise the handle until it starts to cut and continue to cut toward center of workpiece.
4. Loosely hold on to the piece in one hand as it separates from the waste wood.

Sanding and Finishing

Leaving clean cuts will reduce the amount of sanding required. Move the tool support out of the way, adjust the lathe to a **low speed**, and begin with fine sandpaper (120 grit or finer). Coarser sandpaper will leave deep scratches that are difficult to remove, and dull crisp details on the spindle. Progress through each grit without skipping grits (for example, do not jump from 120 grit to 220 grit). Fold the sandpaper into a pad; do not wrap sandpaper around your fingers or the workpiece. To apply a finish, the workpiece can be left on the lathe.

Turn off lathe and use a brush or paper towel to apply the finish. Remove excess finish before restarting lathe. Allow to dry and sand again with 320 or 400 grit sandpaper. Apply second coat of finish and buff.

Face Plate and Bowl Turning

Face plate turning is normally done on the inboard side of the headstock over the bed. Larger workpieces must be turned on the outboard side. Rotate headstock to desired position; or remove tailstock and tool support base, and slide headstock to opposite end of bed.

Mounting Stock

Use of a face plate is the most common method for holding a block of wood for turning bowls and plates:

1. Select stock at least 1/8" to 1/4" larger than each dimension on the finished workpiece.
2. Always select the largest diameter face plate that can be used for the workpiece to be turned.
3. True one surface of the workpiece for mounting against the face plate.
4. Using the face plate as a template, mark the location of the mounting holes on the workpiece, and drill pilot holes of the appropriate size. Face plates are drilled for No. 12 screws. (Phillips and square drive screws will hold up better than slotted screws. Steel metal screws are case hardened with deeper and sharper threads than wood screws.)

If the mounting screws on the face plate interfere with the workpiece, a glue or waste block can be used:

5. Make a block the same diameter as the face plate, Figure 9-9. Both waste block and workpiece should have flat surfaces for gluing.

6. Glue the block to the workpiece. Avoid using brown paper or newspaper between the waste block and workpiece. It may work fine if you are using scrapers, but a slight catch with a bowl gouge can separate the two.

NOTE: When using a waste block, be careful with the adhesive you select. Dry workpieces can be bonded with ordinary white or yellow glue but must be clamped to ensure a good bond. Green workpieces require cyanoacrylate type glue.

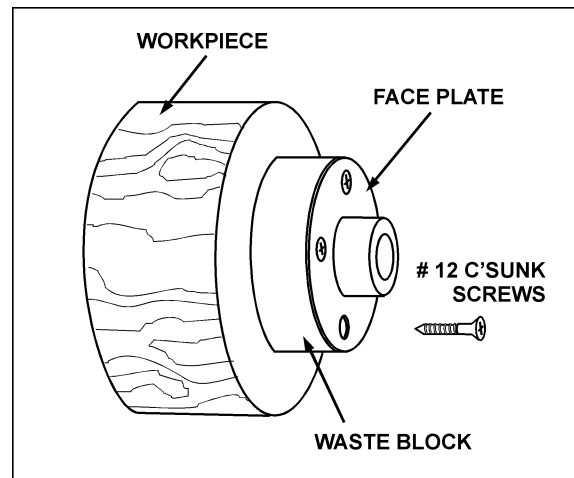


Figure 9-9

Faceplate or Chuck?

While faceplates are the simplest, most reliable method of holding a block of wood for turning, chucks can also be used.

As there are dozens of chucks to choose from, the woodturner should first consider all the different types of turning that will be done, and read reports or discuss with other turners who own chucks before making a decision.

A chuck is not a requirement, but is handy when working on more than one piece at a time. Rather than removing screws, you simply open the chuck and change workpieces.

The most popular ones are four jaw scroll chucks with a variety of jaws to accommodate different size tenons. Most also come with a screw chuck as well.

Wood Selection

Firewood is the cheapest, most widely available stock to use while learning to turn bowls. Simply waste wood for a while practicing turning techniques. Develop skill with each tool before attempting to make a finished piece. It is best to start with dry wood, without worrying about drying or distortion. Once turning becomes comfortable, try green wood which cuts very easily. As the turner gains experience, he or she will find extraordinary grain and figure in the form of burls, crotches and bark inclusions.

Checks and Cracks

Green wood will check and crack. For best results, leave logs in as long a length as you can handle. As the material starts to dry, surface cracks will develop on the ends of the log. Cut off two to three inches and you should find good, sound wood. Also cut the log in half along the pith to avoid having it in the finished piece. Most checks radiate from the pith.

As you turn bowls from green wood, make sure you maintain a consistent wall thickness throughout the piece. Leaving a piece thick in some areas and thin in others will cause the wood to dry unevenly and promote checks and cracks.

Distortion

Distortion is a problem associated with turning green wood. It will vary from one type of wood to the next. Typically, fruitwoods tend to distort more than others. It also varies with the time of year the tree was cut and how the logs are stored.

Tools for Bowl Turning

The deep fluted bowl gouge is the most essential and versatile tool for most bowl and plate turning. The bowl gouge is heavier and easier to control than other types of gouges. It also allows removal of wood much faster

and with less vibration than other gouges. Most average sized bowl work can be accomplished with a 3/8" or 1/2" bowl gouge.

A 1/4" bowl gouge is best suited for smaller bowls and light finishing cuts. Larger 3/4" and 1" bowl gouges are only used for extremely large pieces.

Large domed scrapers can also be used to help clean up the interior surfaces of bowls. A light touch with the scraper slightly tilted will eliminate some of the ridges occasionally left by an inexperienced bowl gouge.

Bowl Turning Techniques

To Shape Outside of Bowl

1. Odd shaped burls, crotches and other irregular shaped blanks require special preparation before mounting in a chuck or onto a faceplate. Remove the bark, if there is any, from what appears to be the center of the top of the workpiece.
2. Drive spur center into the top of the workpiece with a mallet or dead blow hammer.
3. Slip the spur center into the headstock taper and bring the tailstock with a live or ball bearing center into position. Lock the tailstock to the bed and advance the tailstock spindle in order to seat the cup center into the workpiece. Tighten the ram locking handle.
4. Turn workpiece by hand to ensure proper clearance.
5. Start lathe at lowest speed and bring it up to the maximum safe speed for the size of work to be turned. If the machine starts to vibrate, lower the speed until vibration stops.
6. Rough out the outside of the bowl with the 1/2" deep fluted bowl gouge, holding the handle of the tool firmly against your hip. For best control, use your whole body to move the gouge through the workpiece.
7. As the bowl takes shape, work on the bottom (tailstock end) to accommodate attaching a face plate.
8. Turn a short tenon (about 1/8" long) the size of the hole in the faceplate. See Figure 9-10. This will allow centering the workpiece when the faceplate is attached.

(NOTE: If you plan to use a chuck, turn a tenon of the appropriate length and diameter to fit your chuck.)

9. Stop the lathe, remove workpiece and attach face plate or chuck (see section 9.6.1 "Mounting Stock").



WARNING The surfaces of faceplate and workpiece should mount flush to each other.

10. Finish turning the outside of bowl with 1/2" or 3/8" bowl gouge. Leave additional material at base of bowl for support while turning interior. This will be removed later.

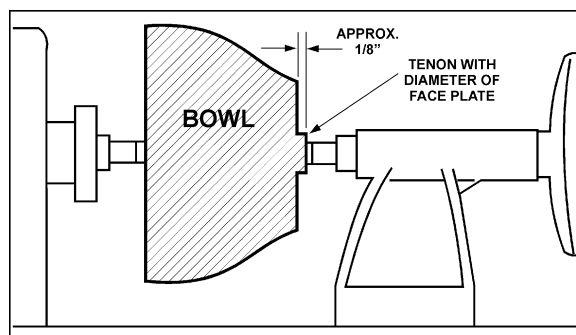


Figure 9-10

To Shape Interior of Bowl

1. Stop lathe and move tailstock away. (You may want to remove the center from the tailstock to avoid bumping it with your elbow.)
2. Adjust tool support in front of the bowl just below centerline, at a right angle to the lathe ways.
3. Rotate workpiece by hand to check clearance.
4. Face off top of bowl by making a light shearing cut across the top of workpiece, from rim to center.
5. Place 1/2" bowl gouge on tool support at center of the workpiece with the flute facing top of bowl. The tool handle should be level and pointed toward the four o'clock position, as shown in Figure 9-11.

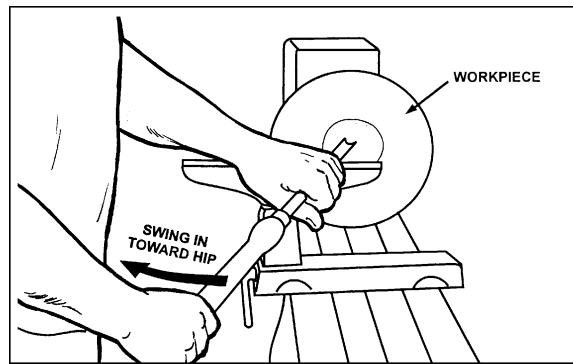


Figure 9-11

6. Use the left hand to control cutting edge of gouge, while right hand swings tool handle toward your body (Figure 9-11). The flute should start out facing top of workpiece, and rotate upward as it moves deeper into the bowl to maintain a clean even curve. As the tool goes deeper into the bowl, progressively work out toward the rim. It may be necessary to turn the tool support into the piece as you get deeper into the bowl.

(NOTE: Try to make one, very light continuous movement from the rim to the bottom of the bowl to ensure a clean, sweeping curve through the piece.)

Should there be a few small ridges left, a light cut with a large domed scraper can even out the surface.)

7. Develop wall thickness at the rim and maintain it as you work deeper into the bowl (Once the piece is thin toward the bottom, you cannot make it thinner at the rim). When the interior is finished, move the tool support to exterior to re-define bottom of bowl. (General rule of thumb: the base should be approximately 1/3 the overall diameter of the bowl).
8. Work the tight area around faceplate or chuck with 1/4" bowl gouge.
9. Begin the separation with a parting tool, but do not cut all the way through yet.

Sanding and Finishing

1. Remove the tool support and adjust lathe speed to approximately 500 RPM. Higher speeds can build friction while sanding and cause heat check in some woods.
2. Begin with fine sandpaper (120 grit) and progress through each grit, using only light pressure. Coarser sandpaper tends to leave deep scratches that are hard to eliminate. Use power-sanding techniques to avoid concentric sanding marks around your finished piece. Avoid rounding over the rim and foot with sandpaper; try to keep details crisp. Finish sanding with 220 grit.
3. Remove sanding dust with tack rags or compressed air and, with lathe turned off, apply first coat of finish. Let stand for several minutes, wipe off excess. Allow to dry before sanding again with 320 or 400 grit sandpaper.
4. Turn lathe back on and continue the separation cut almost all the way through the base. Stop at about 3" and use a small fine tooth saw to separate the bowl from the waste.
5. Apply second finish coat and allow to dry before buffing.

Maintenance

⚠ WARNING Before doing maintenance on the lathe, disconnect it from the electrical supply by pulling out the plug or switching off the main switch. Failure to comply may cause serious injury.

General procedures

Maintenance on the wood lathe should be performed at periodic intervals to ensure that the machine is in proper working order, that all fasteners are tight, and all necessary adjustments have been made. Inspection and maintenance should be performed at least twice a year, but more frequently if the lathe receives constant use.

Clean and oil the lathe bed so that headstock, tailstock and tool rest base will slide easily. Clean any rust spots that may develop on the bed with a commercial rust remover.

Use compressed air to blow out the interior of the headstock, in order to keep sawdust and chips from accumulating on belts and sheaves. Also blow off debris that accumulates in the motor fan and around inverter. **Do not disassemble inverter to clean!**

Frequently clean out the morse tapers on both headstock and tailstock. Commercially available taper cleaners may be acquired from tool stores.

Bearings are permanently lubricated and sealed, and do not require further lubrication.

Pulley and belt alignment

The motor and spindle pulleys are aligned with each other by the manufacturer, but if any service is performed that affects their alignment it is very important that they be realigned. Engage spindle lock, loosen two set screws on spindle pulley (E, Figure 9-12) with 3mm hex key, and slide spindle pulley into proper position. Retighten set screws, and disengage spindle lock.

When pulleys and belt are properly aligned, there should be no unusual pulsing sounds or noise coming from the belt.

Recommended Lathe Speeds (per diameter of workpiece)

Diameter of Work	Roughing RPM	General Cutting RPM	Finishing RPM
Under 2"	1520	3000	3000
2" to 4"	760	1600	2290
4" to 6"	510	1080	1500
6" to 8"	380	810	1125
8" to 10"	300	650	900
10" to 12"	255	540	750
12" to 14"	220	460	640
14" to 16"	190	400	560
16" to 20"	175	325	450
20" to 24"	175	260	375

Table 3


Troubleshooting AL-EL20-U Lathe

Table 2

Symptom	Possible Cause	Correction *
Motor fails to develop full power.	Power line overloaded.	Correct overload condition.
	Undersized wires in supply system, or extension cord is too long.	Increase supply wire size.
	Low voltage.	Request voltage check from power company and correct low voltage condition.
	Worn motor.	Replace motor.
Motor or spindle stalls or will not start.	Excessive cut.	Reduce depth of cut.
	Worn or broken belt.	Replace belt.
	Improper cooling of motor.	Blow out sawdust from motor housing fan.
	Worn spindle bearings.	Replace bearings.
	Worn motor.	Replace motor.
Excessive vibration or noises.	Workpiece warped, out of round, has major flaw, was improperly prepared for turning.	Correct problem by planing or sawing workpiece, or discard entirely and use new workpiece.
	Spindle rotation too fast.	Reduce speed.
	Worn spindle bearings.	Replace spindle bearings.
	Drive belt misaligned or worn.	Align belt. Replace if worn.
	Motor mount bolts are loose.	Tighten bolts.
	Lathe on uneven surface.	Adjust leveling feet.
Tools tend to grab or dig in.	Dull tools.	Keep tools sharp.
	Tool rest set too low.	Reposition tool rest height.
	Tool rest set too far from workpiece.	Reposition tool rest closer to workpiece.
	Improper tool being used.	Use correct tool for operation.
Headstock moves when applying pressure with Tailstock.	Locking handle not tight.	Tighten handle.
	Excessive pressure being applied by tailstock.	Slide headstock to left end, lock firmly, then apply pressure to workpiece with tailstock. Apply <i>only</i> sufficient force with tailstock to hold workpiece securely in place.
Tailstock moves when applying pressure.	Cam lock nut needs adjusting.	Tighten cam lock nut.
	Excessive pressure being applied by tailstock. (Note: The screw action of the tailstock is capable of applying excessive pressure to workpiece and headstock. Apply only sufficient force by tailstock to hold workpiece securely in place. Excessive pressure can cause damage to machine.)	Slide tailstock to right side of lathe against the stop. Move headstock into position and apply pressure to workpiece with tailstock.
	Lathe bed and tailstock mating surfaces are greasy or oily.	Remove tailstock and clean surfaces with a cleaner/degreaser. Re-apply light coat of oil to lathe bed surface.
Digital readout does not work.	Digital sensor out of position.	Open belt access and position sensor so that it reads the bolts.

* **Warning:** Some corrections may require a qualified electrician.

A – Exploded View

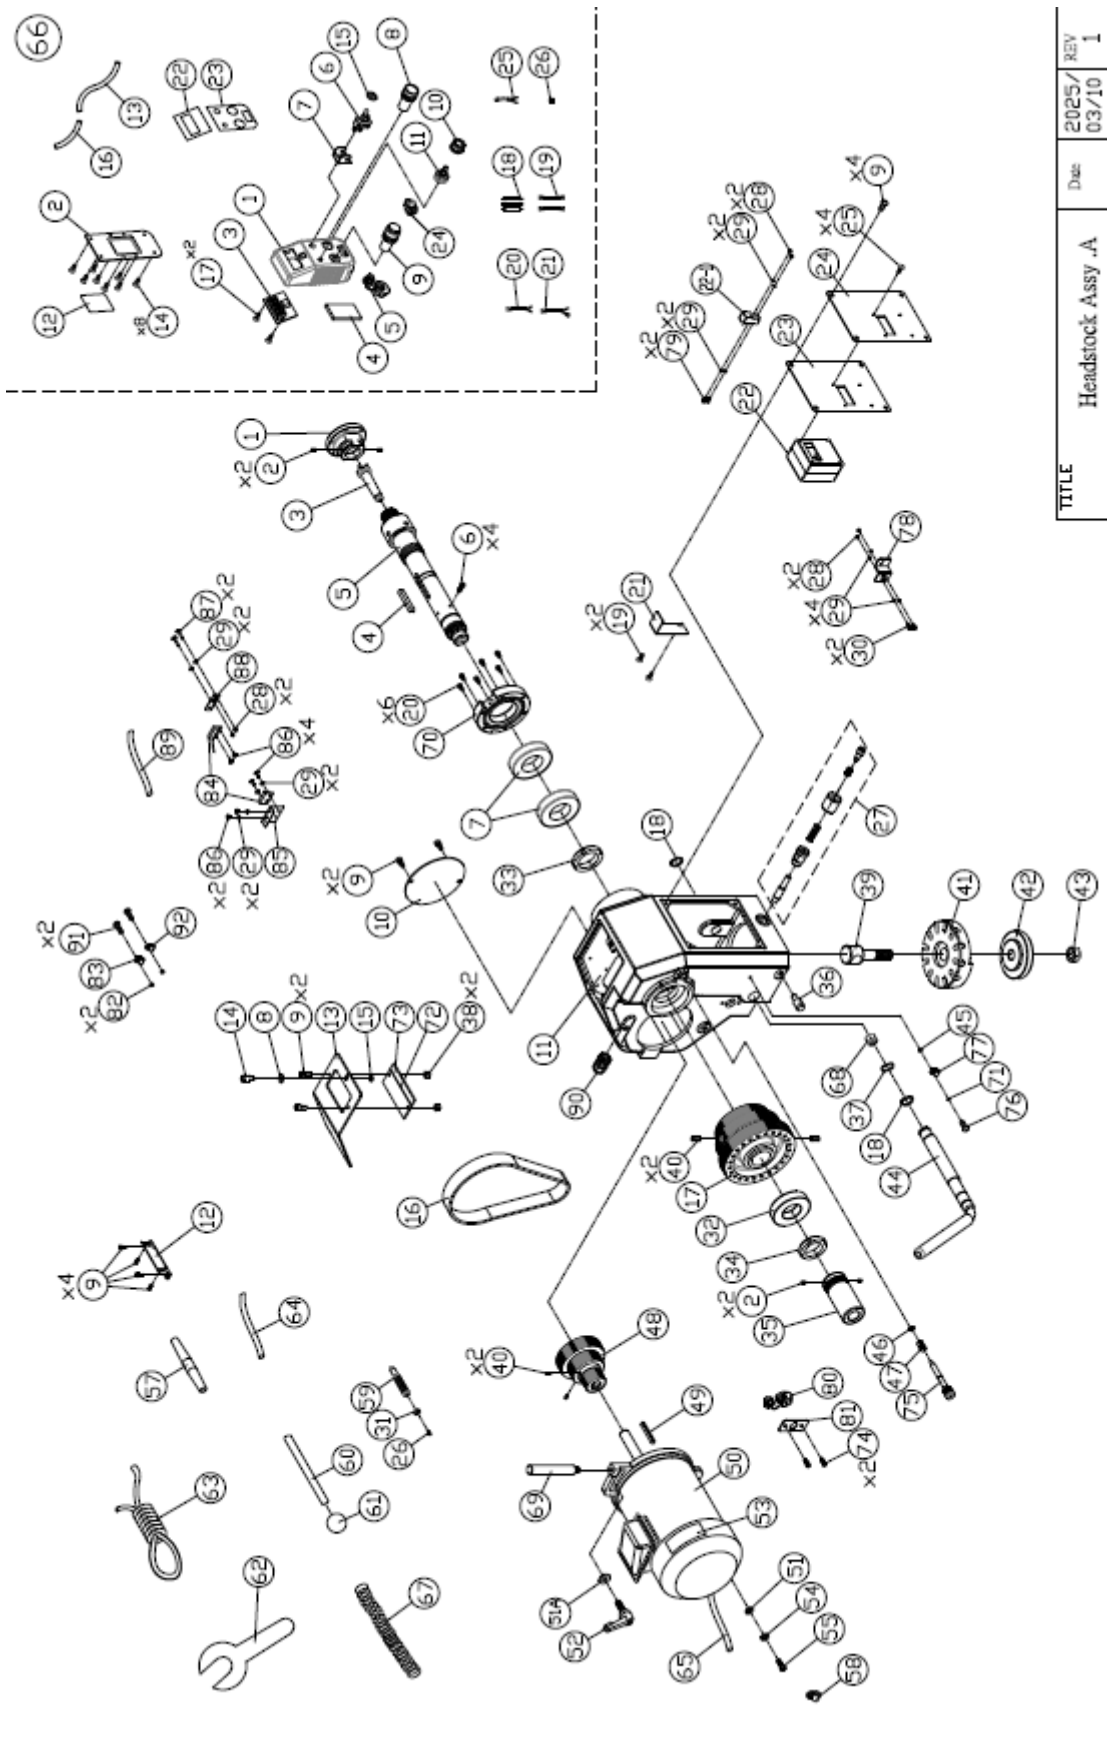

TITLE	Headstock Assy .A	Due	2025/03/10	REV	1
-------	-------------------	-----	------------	-----	---

A – Parts List

PART NO.	DESCRIPTION	SPECIFICATION	Q' ty
A01	Face plate	1-1/4" -8TPI	1
A02	set screw	1/4" x3/8"	4
A03	Spur Center	MT2	1
A04	Key	8*8*60	1
A05	Spindel	1-1/4" -8TPI	1
A06	Round Head Screw	M6*10mm	4
A07	Bearing	6209	2
A08	WASHER	M6	1
A09	Round Head Screw	M5x12mm	12
A10	cover		1
A11	Headstock		1
A12	Latter Niu		1
A13	belt cover		1
A14	Screw	1/4"	1
A15	Nut	CSTW-5	1
A16	belt	250J-10	1
A17	Spindle Pully		1
A18	C ring	S-22	2
A19	tap screw	1/4x1/2	2
A20	Cap screw	M5x25	6
A21	cover plate		1
A22A	Digital readout group		1
A22-1	proximity switch		1
A22-2	switch box		
A22-3	Digital readout	230V	
A23	control plate		1
A24	control panel acrylic		1
A25	tap screw	M3*10	4
A26	FLAT HEAD SCREW	M3x10	1
A27	Headstock pivot locking pin		1
A28	Nylo Nut	M3	6
A29	Washer	M3	14
A30	Round Head Screw	M3*35	2
A31	magnet		1
A32	Bearing	6208	1
A33	GUK nylon Nut	M45	1
A34	GUK nylon Nut	M40	1


A35	hand wheel		1
A36	Stop rod		1
A37	wave washer	BWW6201	1
A38	NYLON NUT	M5	2
A39	bolt		1
A40	set screw	M6x12	4
A41	headstock base		1
A42	fixing piece		1
A43	nylo nut	3/4"	1
A44	headstock shaft		1
A45	NUT	M5	1
A46	C-ring	S-9	1
A47	Spring		1
A48	motor pully		1
A49	key	6*6*55	1
A50	motor		1
A51	washer	3/8" x ϕ 20x3	2
A52	handle	3/8"	1
A53	Motor Label		1
A54	spring washer	3/8"	1
A55	Cap screw	3/8"-16uncx1-1/4	1
A57	DOUBLE CONE		1
A58	wire fixing piece	ACC-5	1
A59	lock pin		1
A60	tapered shaft		1
A61	knob		1
A62	Faceplate wrench		1
A63	POWER CORD		1
A64	Single Wire		1
A65	MOTOR WIRE		1
A66	Control Box		1
A66-1	Control box-UP		1
A66-2	Control box-Under		1
A66-3	Speed Display		1
A66-4	Magnet		1
A66-5	cord protector	SR-6P3	1
A66-6	Few/Rev switch		1
A66-7	Switch guard		1
A66-8	ON SWITCH		1
A66-9	OFF SWITCH		1

A66-10	VR knob		1
A66-11	VR Control		1
A66-12	Foam		1
A66-13	remote control line		1
A66-14	Tapping Screw	M3*14	8
A66-15	Safety Washer	M12	1
A66-16	Single wire		1
A66-17	Tapping Screw	M3*6	2
A66-18	wire 1		3
A66-19	wire 2		2
A66-20	wire 3		1
A66-21	wire 4		1
A66-22	Control box Lable		1
A66-23	Control box Lable		1
A66-24	Switch Fwd / Rev		1
A66-25	LED lamp		1
A66-26	led lamp holder		1
A67	HORSE		1
A68	Copper Bushing		1
A69	MOTOR HANDLE		1
A70	BEARING COVER		1
A71	TOOTH WASHER	M5	1
A72	Lable		1
A73	PMMA PLATE		1
A74	Buttom Head Screw	M5x8	2
A75	lock pin		1
A76	Round head screw	M5x30	1
A77	wire fixing piece	ACC-2.5	1
A78	SENSOR BRACKET		1
A79	Round Head Screw	M3*25	2
A80	Strain Relief	SR-6P3	1
A81	Cover		1
A82	Nut	#10-24	2
A83	Wire Clamp	ACC-1.5	1
A84	Reed Switch		1
A85	Sensor Bracket		1
A86	Round Head Screw	M3x8	6
A87	Round Head Screw	M3x15	2
A88	Switch Bracket		1
A89	Single Wire 2		1

A90	Cord Protector		1
A91	Screw	#10-24*5/8"	2
A92	Wire Clamp	ACC-2	1

PART NO.	DESCRIPTION	SPECIFICATION	Q' ty
A66-21	wire 4		1
A66-22	Control box Lable		1
A66-23	Control box Lable		1
A66-24	Switch Fwd / Rev		1
A66-25	LED lamp		1
A66-26	led lamp holder		1
A67	HORSE		1
A68	Copper Bushing		1
A69	MOTOR HANDLE		1
A70	BEARING COVER		1
A71	TOOTH WASHER	M5	1
A72	Lable		1
A73	PMMA PLATE		1
A74	Buttom Head Screw	M5x8	2
A75	lock pin		1
A76	Round head screw	M5x30	1
A77	wire fixing piece	ACC-3	1
A78	SENSOR BRACKET		1
A79	Round Head Screw	M3*25	2
A80	Strain Relief	SR-6P3	1
A81	Cover		1
A82	Nut	#10-24	2
A83	Wire Clamp	ACC-1.5	2
A84	Reed Switch		1

B – Exploded View

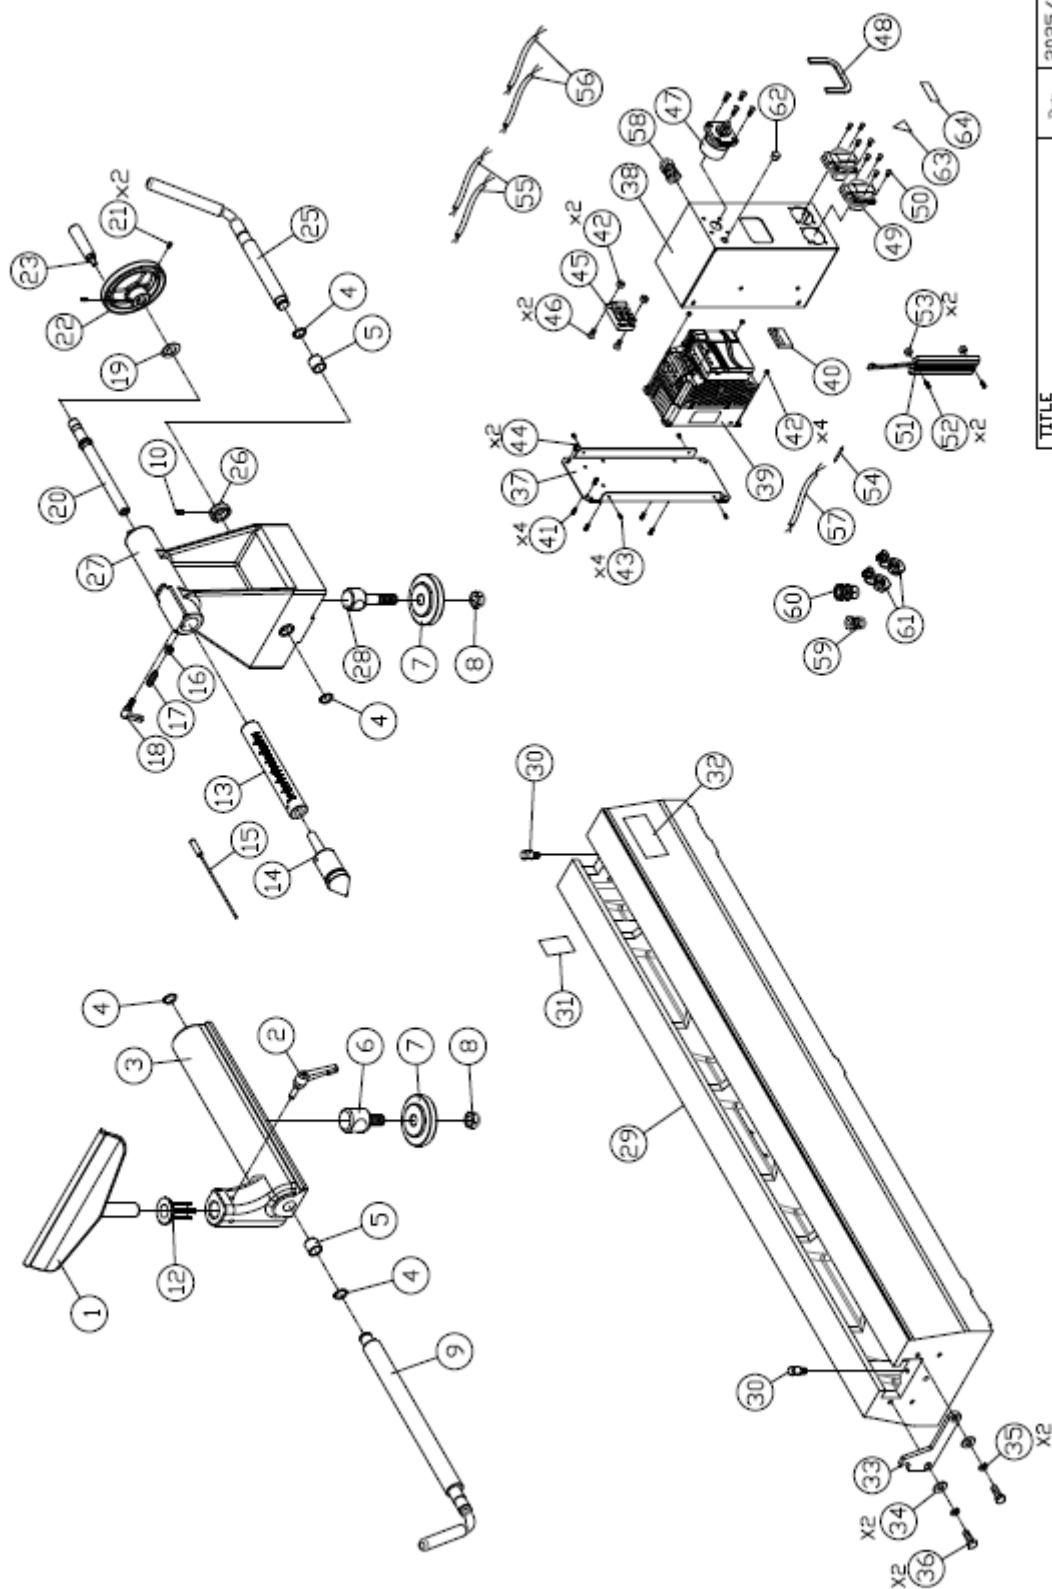


TITLE	Date	2025/ 03/10	REV 1
-------	------	----------------	----------

B– Parts List

PART NO.	DESCRIPTION	SPECIFICATION	Q' ty
B01	Tool rest	14"	1
B02	Lever	3/8"	1
B03	Toolrest Carriage		1
B04	C ring	S-22	4
B05	Bushing		2
B06	Bolt		1
B07	Fixing Piece		2
B08	Nylon nut	3/4" *10unc	2
B09	Eccentric shaft		1
B10	set screw	5/16" x1/4"	1
B12	Adapter		1
B13	QUILL		1
B14	Live Ceter	MT2	1
B15	Live Center Rod		1
B16	nut	M10	1
B17	Set screw	M10x30	1
B18	Locking Handel	5/16" x25MM	1
B19	Thrust Washer		1
B20	Tailstock Screw	Tr20x4	1
B21	Set screw	1/4" *1/4"	2
B22	Handwheel		1
B23	Handle		1
B25	Eccentric shaft		1
B26	STOP RING		1
B27	Tailstock		1
B28	Bolt		1
B29	Bed		1
B30	stop rod		2
B31	NAME LABEL		1
B32	ID LABEL		1
B33	Stop plate		1
B34	Washer	M10	2

B35	Spring washer	M10	2
B36	Hex Screw	M10x30mm	2
B37	Inverter box-Down		1
B38	Inverter box-Up		1
B39	Inverter	3HP	1
B40	Control panel		1
B41	Flat head screw	M4x15	4
B42	NUT	M4	6
B43	Round head screw	M4x10	4
B44	Buttom head screw	M6x20	2
B45	Terminal block		1
B46	Flat head screw	M4x20	2
B47	Switch		1
B48	Control box foam		1
B49	Socket		2
B50	Flat head screw	M4x8	8
B51	Brake		1
B52	Buttom head screw	M5x12	2
B53	Nut	M5	2
B54	wire 4		1
B55	Power short cable		2
B56	Power short cable		2
B57	Single wire		1
B58	Strain relief	M16	1
B59	Strain relief	PG9	1
B60	Strain relief	PG13.5	1
B61	Strain relief	SR-6P3	2
B62	Hole Plug		1
B63	Warning Label		1
B64	Label		1

C – Exploded View

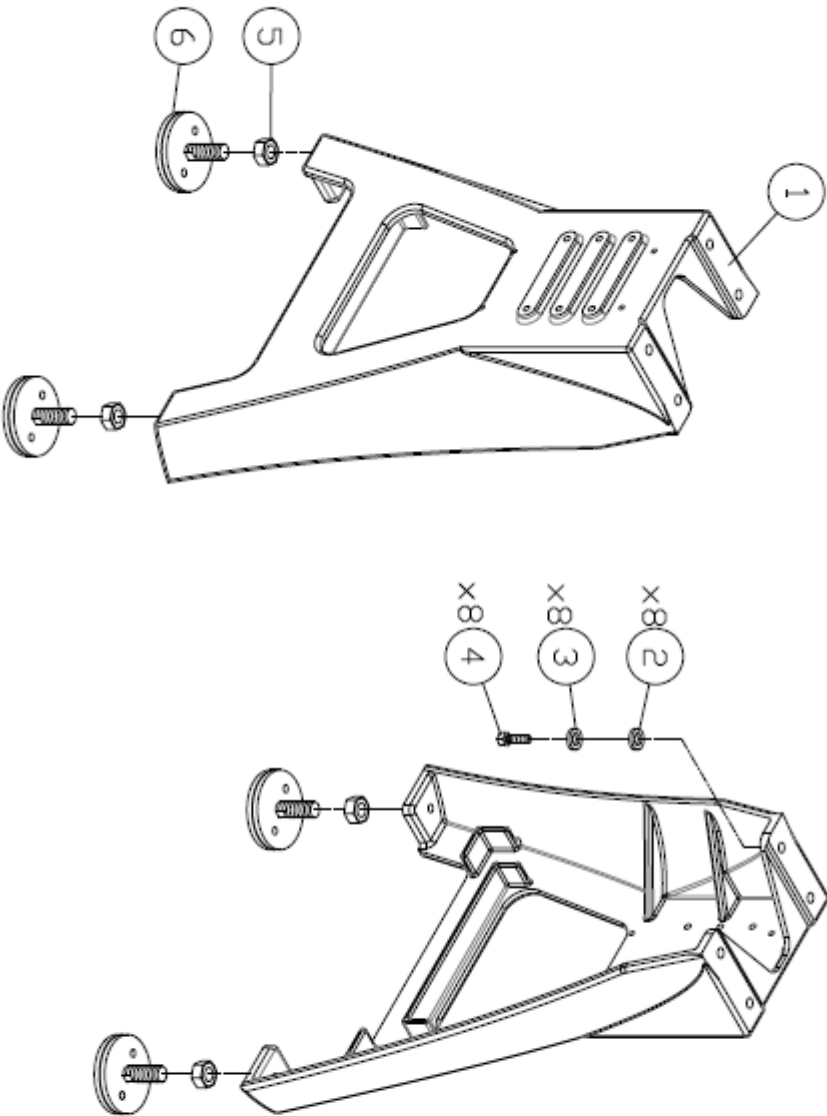

TITLE	DATE	REV
Stand Assy .C	2025/03/10	1

C– Parts List


PART NO.	DESCRIPTION	SPECIFICATION	Q' ty
C01	Stand		2
C02	Washer	M10	8
C03	spring washer	M10	8
C04	Hex Head Screw	M10X40	8
C02	Nut	M20x2. 5P	4
C03	Adjustable Leveler	M20x2. 5P	4

Electrical Connections



NOTE

If a filter is required for reducing EMI(Electro Magnetic Interference) install it as close as possible to AC drive.EMI can also be reduced by lowering the Carrier Frequency. When using a GFI(Ground Fault Circuit interrupter),select a current sensor with sensitivity of 200mA, and not less then 0.1-second detection time to avoid nuisance tripping.

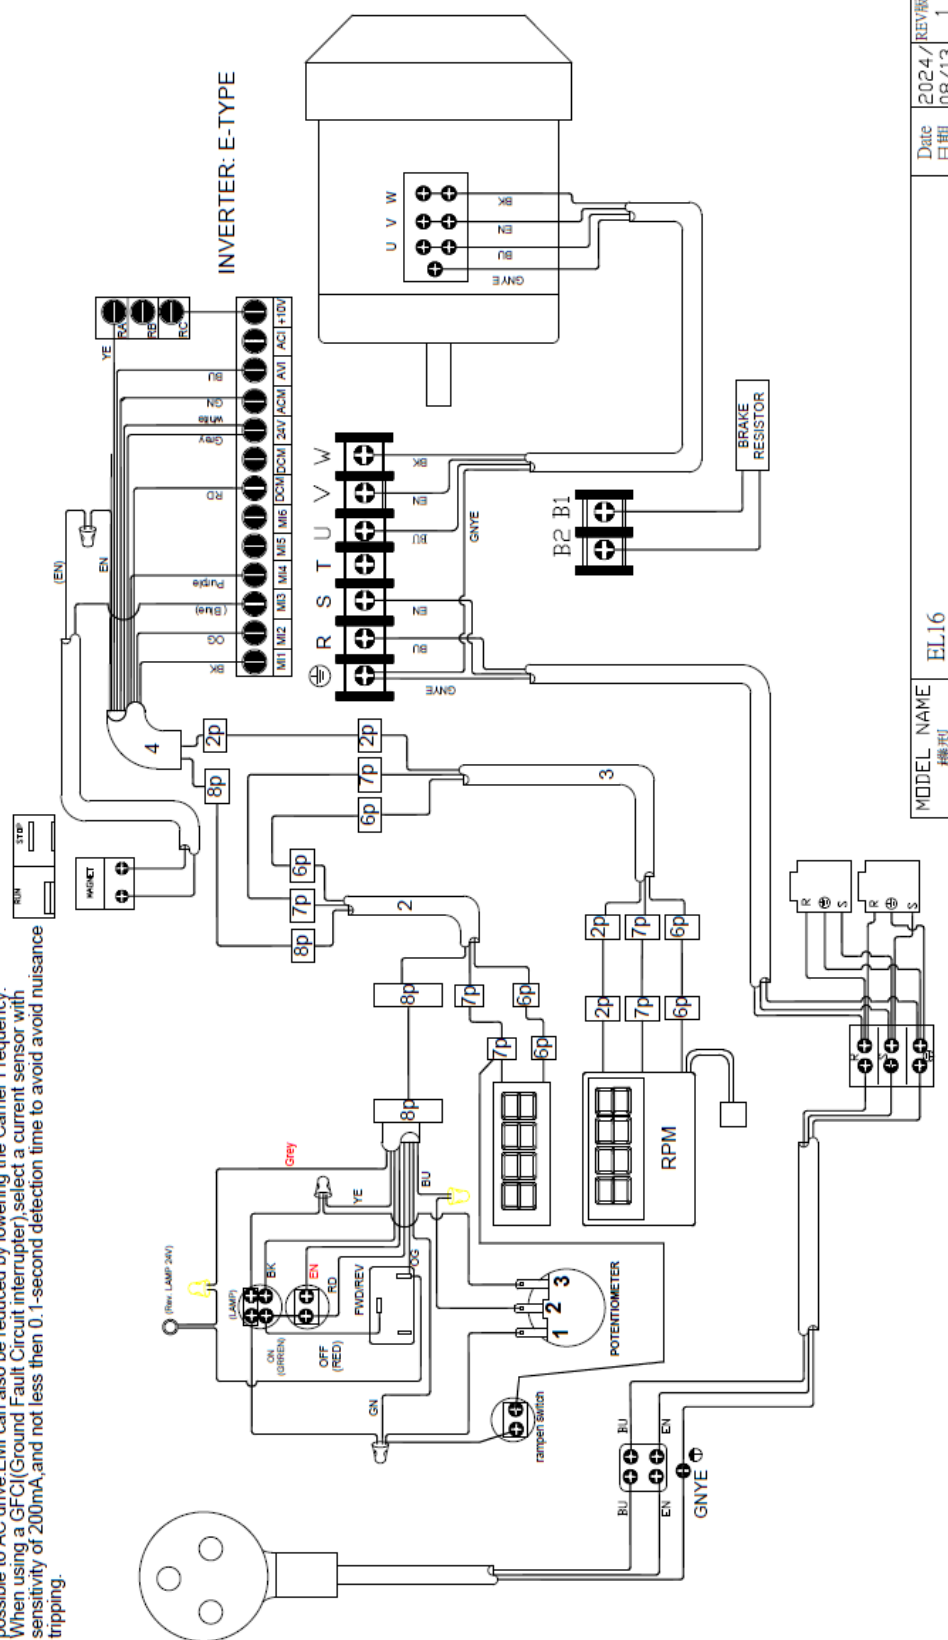

MODEL NAME 機型	EL16	Date 日期	2024/08/13	REV版本 1
------------------	------	------------	------------	------------

Warranty and Service

EXMAC warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact EXMAC

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official EXMAC branded website.

- EXMAC products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90 day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations or lack of maintenance. EXMAC woodworking machinery is designed to be used with Wood. Use of these machines in the processing of metal, plastics, or other materials may void the warranty. The exceptions are acrylics and other natural items that are made specifically for wood turning.

Warranty Limitations

Woodworking products with a Five Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

EXMAC LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. EXMAC SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.